

LIMITED WARRANTY & LIMITATION OF LIABILITY

Each Lumenelle™ product is warranted to be free from defects in material and workmanship under normal use and service. The warranty period is one year and begins on the date possession is taken by the Buyer when purchased in person or on the date of shipment when the product is mailed or otherwise delivered to the Buyer. This warranty is in lieu of all other warranties, express or implied and the implied warranty of merchantability is limited to one year as above.

Exclusions. This warranty does not cover:

- The cost of installation, removal, or reinstallation,
- Any product which, in Lumenelle's opinion, has been misused; altered; damaged from improper wiring or installation; damaged by accident or vandalism; subjected to abnormal conditions of operation, handling or storage; or subjected to neglect,
- Bulbs, fuses, disposable batteries unless defective or dead at time of initial possession.

Lumenelle's warranty obligation is limited, at Lumenelle's option, to a refund of the purchase price, repair at no charge, or the replacement of a defective product when returned to Lumenelle™ or to a Lumenelle™ authorized reseller during the warranty period. Lumenelle™ assumes no risk for damage in transit to Lumenelle.

OUT OF WARRANTY SERVICE

If Lumenelle™ determines that the product is not covered by Warranty due to any of the exclusions listed above or the warranty period has expired, Lumenelle™ will provide an estimate of repair costs plus any return shipping or delivery costs. Lumenelle™ will not commence any repair work prior to obtaining written authorization from the original buyer or end user customer.

- If the original buyer or end user customer chooses not to have any repair work performed, original buyer or end user customer is responsible for any return shipping and/or transportation charges.
- If the original buyer or end user customer chooses to have any repair work performed, the product will not be returned to the original buyer or end user customer until all repair and estimated return charges have been paid unless the customer has a credit account in good standing with Lumenelle™.

All shipping and/or transportation charges for products not covered by warranty are entirely the responsibility of the original buyer or end user customer.

Lumenelle™

High Abuse - ADA Compliant Outdoor Wall Fixture

Model: WF909-SP01



Made in USA by :

Lumenelle, Inc.
Marengo, IL 60152
www.lumenelle.com

Model: WF909-SP01

DESCRIPTION:

Weather resistant surface mount Wall Fixture.

CONSTRUCTION:

Housing: 16 gauge Powder Coated Aluminum

Lens: 1/8" Nominal White Sign Grade Polycarbonate.

ELECTRICAL: 120V 60W Maximum.

THERMAL PROTECTION:

None. Temperature is limited by the lamp size.

Fixture Contains:

- 1 Wall Fixture
- 2 Wall Fixture Decorative Cover
- 1 Polycarbonate Lens
- 2 8-32 x 1/2" Stainless Steel Screws (Black)
- 2 #8 Stainless Washers (Black)
- 1 Hardware Kit Consisting Of:
 - 4 10-24 x 5/8" Stainless Steel Screws
 - 4 #10 Stainless Steel Lockwashers
 - 3 Twist on Wire Connectors

Replacement Parts:

- Socket Leviton 8876 Medium Base Porcelain Lampholder
- Lamp** Not Included

Patent Pending

© 2005 Lumenelle, Inc. / Rev. 1



WARNINGS:


1. For Installation only by qualified electrical personnel.
2. 120V - 60 Watt maximum incandescent type only!
3. Wall fixture housing must be properly grounded to reduce the risk of electrical shock.

Caution:

Outdoor wall fixture must be caulked with suitable RTV or silicone compound to reduce the chance of water entering into the electrical wall box.

Leave opening at bottom to permit moisture a means to escape.

Example

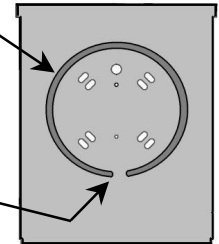

Back of Fixture

Installation:

- 1) Turn power off at circuit breaker panel.
- 2) Attach and square fixture back panel to electrical box using the four 10-24 screws and four #10 lock washers provided in the hardware kit. Caulk fixture as indicated above.
- 3) Connect the wall fixture's green wire to the green (or bare) wire in the wallbox using the supplied wire connector.
- 4) Connect the wall fixture's white lead to the white (neutral) wire in the wallbox using the supplied wire connector. Be sure no bare wire is exposed.
- 5) Connect the wall fixture's black lead to the black (hot) wire in the wallbox using the supplied wire connector. Be sure no bare wire is exposed.
- 6) Insert and seat polycarbonate lens.
- 7) Slide decorative cover into position. Secure cover using the two black screws and washers supplied.
- 8) Do not over-tighten!